


شرح إضافة قمر للأئحة أقمار بجهاز

ECHOLINK TORNADO V1 SUPER


نضغط على الزر MENU



Installation ثم نذهب الى خانة

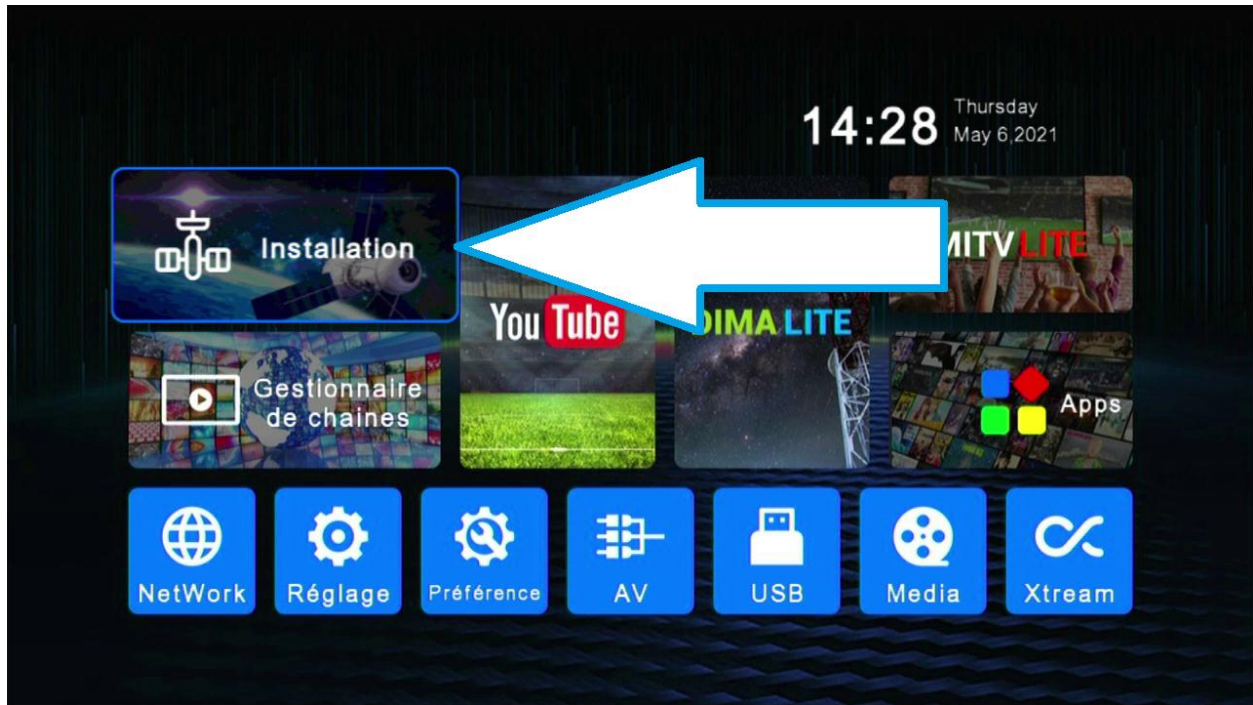

Liste des satellites على ثم نضغط

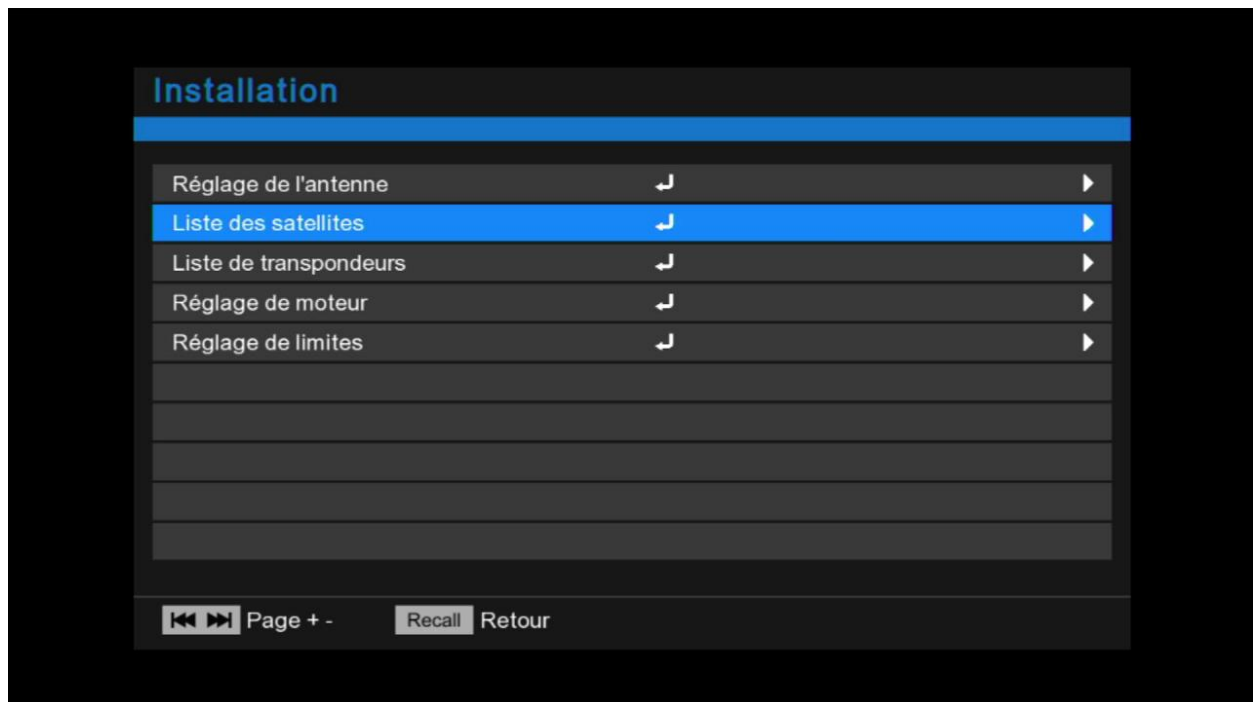

نضغط على زر لأحمر Ajouter

The screenshot shows the 'Liste des satellites' interface. A table lists satellites with columns for 'Nom de satellite', 'Position', and 'Longitude'. The 'Ajouter' button is highlighted with a red box and a large white arrow pointing to it.

Nom de satellite	Position	Longitude
NileSat	West	007.0
Hotbird	East	013.0
BADR-2,3,4	East	026.0
Turksat2A3A4A	East	042.0
EUTELSAT 7A/7B	East	007.0
ASTRA 1H,1KR	East	019.2
Thor	West	000.8
AMOS 2,3	West	004.0

Signal: 98% Qualité: 0%

Ajouter Editer Suppri... Balayage INFO Réglage de l'ant... EXIT Quit...

نختار أسم القمر ودرجة التي يتواجد بها ثم نضغط على أوكي

The screenshot shows the 'Liste des satellites' interface with a dialog box for adding a new satellite. The dialog box has fields for 'No.', 'Nom de satellite', 'Position', and 'Longitude'. The 'Ajouter satellite' button is highlighted.

Non	Nom de satellite	Position	Longitude
0001	NileSat	West	007.0
0002	Hotbird	East	013.0
0003	BADR-2,3,4	East	026.0
0004	Turksat2A3A4A	East	042.0
0005	EUTELSAT 7A/7B	East	007.0
0006	ASTRA 1H,1KR	East	019.2
0007	Thor	West	000.8
0008	AMOS 2,3	West	004.0


 
Signal: 98% Qualité: 0%




 
 
Ajouter Editer Suppri... Balayage INFO Réglage de l'ant... EXIT Quit...

سيظهر لك القمر بأخر لائحة أقمار

Liste des satellites

Non	Nom de satellite	Position	Longitude
0053	Insat 4BC	East	093.5
0054	Insat 4BKu	East	093.5
0055	NSS 6	East	095.0
0056	AsiaSat 3S-C	East	105.5
0057	AsiaSat 3S-Ku	East	105.5
0058	Astra4A&SES5 C	East	004.9
0059	Astra4A&SES5 Ku	East	004.9
0060	Echolink	East	111.1

Signal  98% Qualité:  0%

 Ajouter  Editer  Suppri...  Balayage  INFO  Réglage de l'ant...  EXIT  Quit...